


ANGLE BRACKET FOR 8000 STOP ONLY,
9000 & 9000ADJ HOLDERS AND STOPS

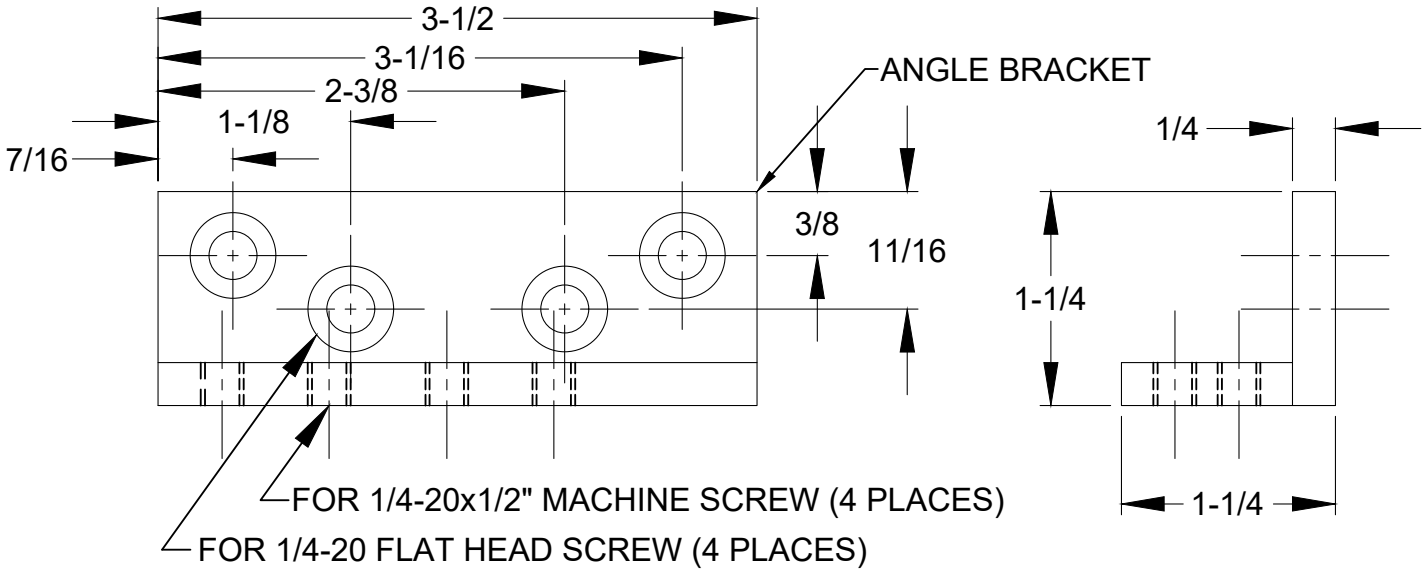

THE ANGLE BRACKET IS SECURED TO THE HEADER WITH WOOD OR MACHINE SCREWS. THE JAMB BRACKET FASTENS TO THE ANGLE BRACKET WITH MACHINE SCREWS. THE CHANNEL MOUNTS ON THE DOOR WITH SEX BOLTS. REVERSE INSTALLATION METHOD IS NOT RECOMMENDED FOR EXTERIOR DOORS OPENING OUT.

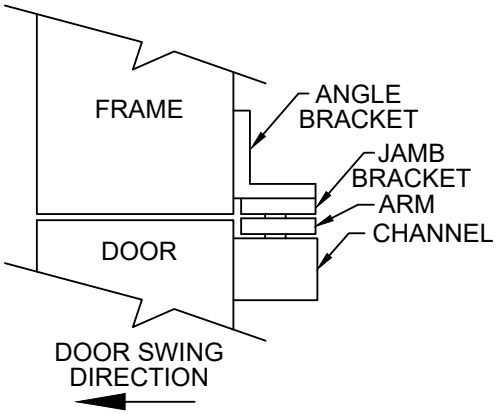

FLUSH DOOR
INSTALLATION
PUSH SIDE OF DOOR
(8000 STOP ONLY, 9000, 9000A)

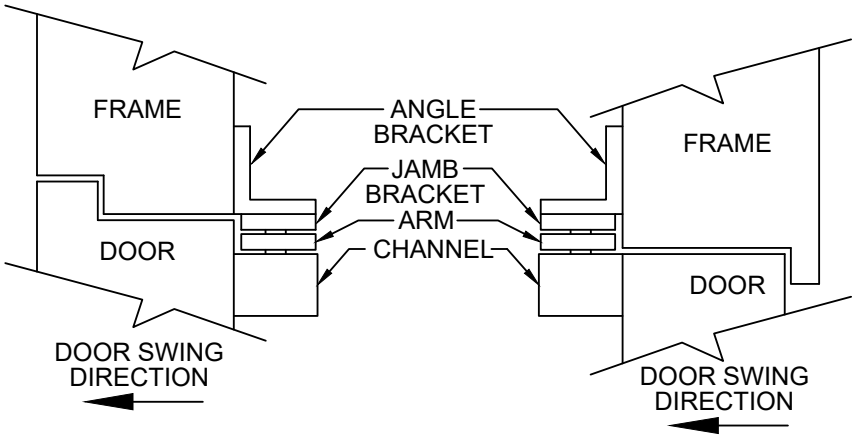

RABBETED DOOR
INSTALLATION
PUSH SIDE OF DOOR
(8000 STOP ONLY, 9000, 9000A)

REVERSE
INSTALLATION
PULL SIDE OF DOOR
(9000)

90541-02.DWG

ARCHITECTURAL BUILDERS HARDWARE
FAMILY-OWNED SINCE 1991 & MADE IN ITASCA, USA.

ABHMFG.COM
abhinfo@abhmfg.com
630.875.9900